


SolarTerrace Ikon

Document No.: PZ85-IM01-10

Version: V1.0

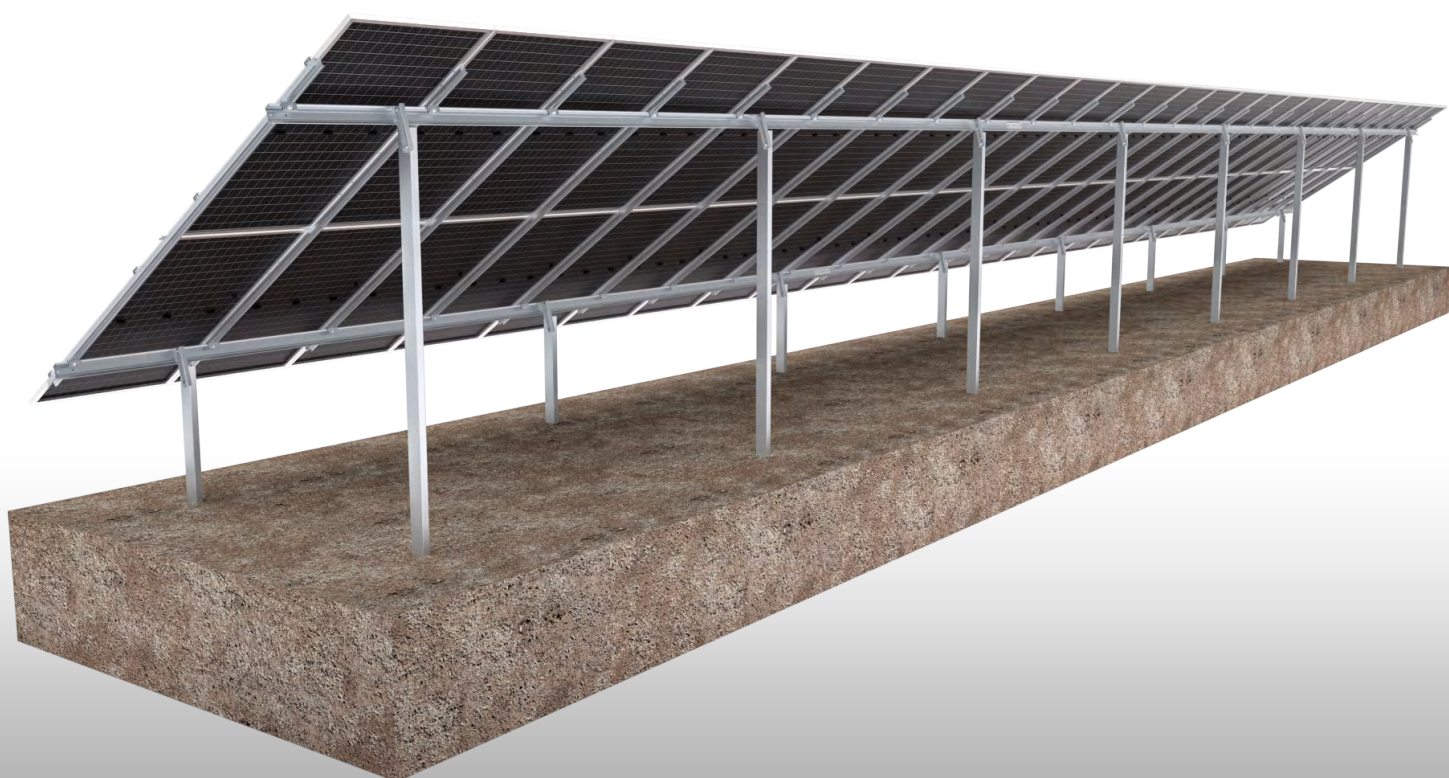

Introduction

The Clenergy PVezRack® SolarTerrace Ikon is an optimal ground mounting solution designed for commercial and utility scale PV installations. Its innovative and efficient design, including quick positioning for panels, swift clamps for structure, back-locked panels, and self-grounding systems, enables effortless and safe installation on all terrains. This solution not only facilitates shorter station construction periods, but also delivers higher ROI and lower LCOE.

Please review this manual thoroughly before installing PVezRack® SolarTerrace Ikon. This manual provides:

- 1) Simple introduction of the installation relating to SolarTerrace Ikon Mounting systems.
- 2) Planning and installation instructions for SolarTerrace Ikon.

List of contents

Introduction	1
Overview	2
List	6
Structure Installion Process	9

Structural integrity of the PVezRack® SolarTerrace Ikon parts will be compliant with the Eurocodes, ASCE 7-16, JISC 8955 and AS/NZS 1170.2:2011 (R2016) standards when installed correctly. Make sure to comply with the relevant Occupational Health and Safety regulations when carrying any installation. Also, make sure to comply with other relevant State or Federal regulations.


Always check you are using the latest version of this Installation manual. To do that, contact your local distributor or contact Clenergy via www.clenergy.com.cn.

The installer is solely responsible for:

- Complying with all applicable local or national building codes, including any that may supersede this manual;
- Ensuring that PVezRack® and other products are appropriate for the particular installation and the installation environment;
- Using only PVezRack® parts and installer-supplied parts as specified by the PVezRack® project plan. (substitution of parts may void the warranty and invalidate the letter of certification);
- Recycling: Recycle according to the local relative statute;
- Removal: Reverse installation process;
- Ensure that there are no less than two professionals working on panel installation;
- Ensure the installation of related electrical equipment is performed by qualified personnel. For the electronic components, refer to the relative instruction manual (eg. inverter);
- Ensuring safe installation of all electrical aspects of the PV array.





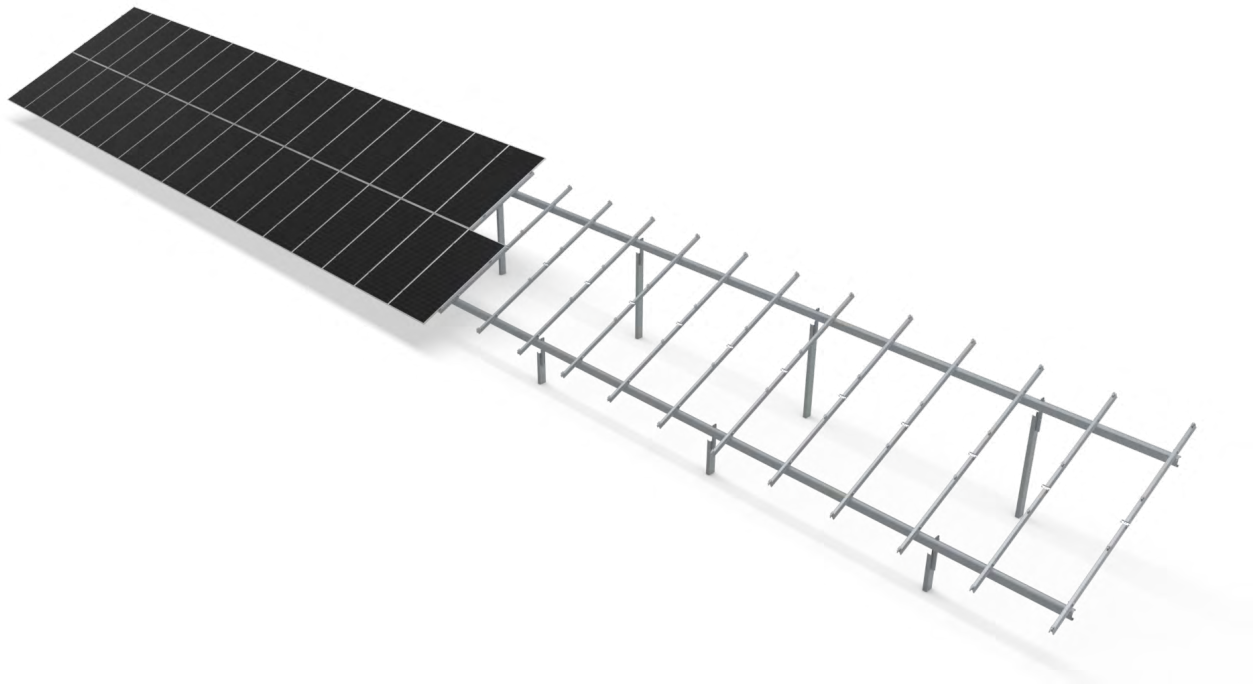







Overview

Technical Details



Panel Orientation	2 Portrait
Wind Load	Refer to the "General Assembly Drawing"
Snow Load	Refer to the "General Assembly Drawing"
Tilt Angle	Refer to the "General Assembly Drawing"
Foundation	Ramming
Material	Post: HDG Crossbeam: ZAM (Zinc-Aluminum-Magnesium) Steel Purlin: ZAM (Zinc-Aluminum-Magnesium) Steel Fastener: SUS304 or HDG
Terrain Adaptability	N-S: Unlimited E-W: Up to 30% slope
Post Span	Perimeter Rows: Refer to the "General Assembly Drawing" Interior Rows: Refer to the "General Assembly Drawing"
Table Length	Refer to the "General Assembly Drawing"
Standard	EURCODE 0-9 AS NZS 1170.2 ASCE 7-16 JISC 8955
Certification	CE, TUV, Wind Tunnel Test
Warranty	12 years


Installation Tool

				
M8 Socket	M12 Socket	M8/M12 Socket Wrench	Electric Auto-Wrenc	M12 Wrench
				
M8/12 Torque Wrench (Torque Ranger: 10-100N•m)	Inclinor	String	Tape	Hammer
				
Mark Pen	Total Station or Equivalent Instrument			



The installation tool is not in the scope of supply.

Precautions in the Process of Installation


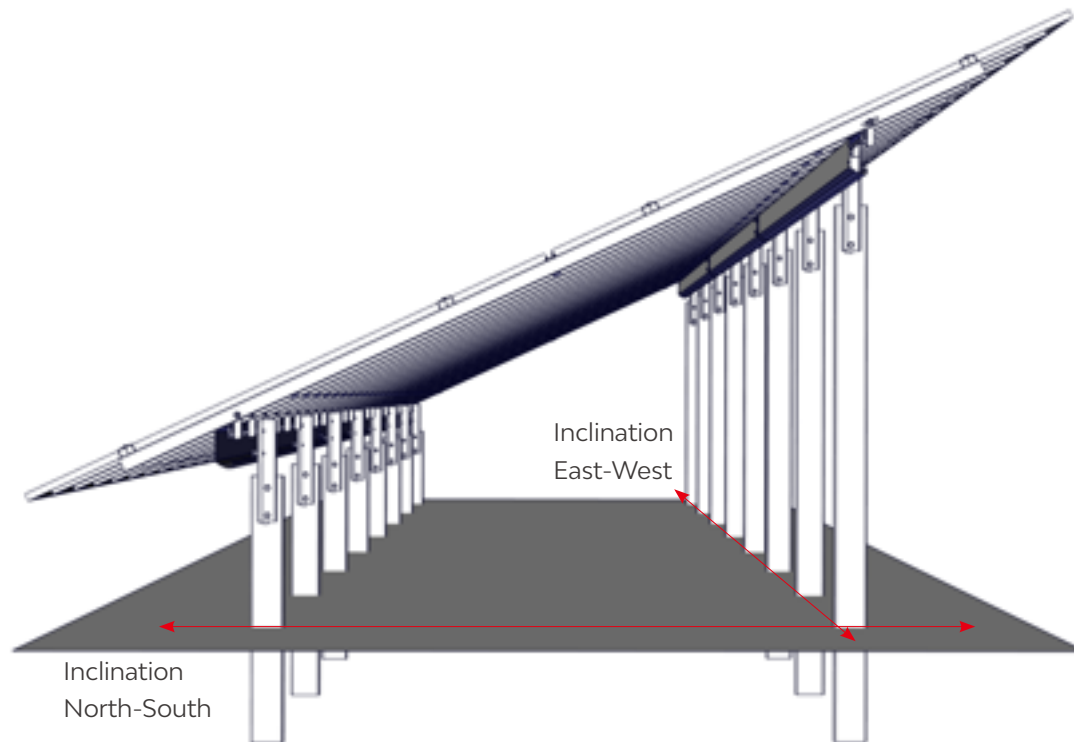








- Before unpacking, check the quantity of each package is consistent with the label, if there is an abnormality, please take a photo and contact Clenergy immediately. If the quantity is less after unpacking and installation, Clenergy will no longer replenish the goods free of charge. Before installation, the size and appearance of the product should be checked, if any abnormalities are found, please give the feedback to Clenergy engineer immediately. If installation continues, Clenergy will not be responsible for rework costs and relevant losses.
- Using professional scaffolding poles to build PVezRack® SolarTerrace Ikon installation platforms, material placement racks, etc., and equipping the necessary shelves or ladders for high-altitude work. Each component of PVezRack® SolarTerrace Ikon such as posts, crossbeams, purlins cannot be used to construct auxiliary installations. It is also not allow to use any parts of PVezRack® SolarTerrace Ikon to build a temporary frame to carry items, etc., resulting in the deformation of the parts.
- It is strictly forbidden to drag PVezRack® SolarTerrace Ikon components on site. The surface of the product should be prevented from rubbing with other items, which cause the zinc layer to fall off and cause rust, etc. If this leads to abnormal appearance, Clenergy will void the warranty. High-altitude work and water operation should avoid fasteners and products falling from high places, if they fall, they should be picked up immediately to avoid the product being covered by surface dust, rainwater, etc. If this leads to a shortage of product materials, Clenergy will not give free replenishment. If the zinc layer falls off due to wrong or improper operation, knocking on the product, etc., the construction team needs to immediately correct and remove rust and spray zinc for repair.
- Each component of PVezRack® SolarTerrace Ikon such as posts, crossbeams, purlins, and so on should be installed correctly, and the product itself should not be torsionally deformed, welded, have internal stress, inclined torsional force, etc. So each component should be adjusted to eliminate deformation, internal stress, torsion and other abnormalities before the components can be installed. Otherwise Clenergy will void the warranty.

- In the actual installation on site, if the angle of the component, the ground clearance, the span of the piles, the distance between the north and south of the piles, the height of the pile upper the ground, and the angle of the all orientation inclination of the ground are inconsistent with the parameters of the drawing, please give the feedback to Clenergy engineer immediately. If installation continues, Clenergy will not be responsible for rework costs and relevant losses.
- The torque of fasteners should be strictly in accordance with the installation instructions.
- During the installation process, if it is found that the surface of the bracket product is stained with other foreign objects such as mud and lubricating oil, it needs to be cleaned before installation. If you need to cut, drill or otherwise transform the bracket products due to the undulating terrain and foundation deviation, please contact the Clenergy engineer, and the transformation can only operate after confirmation, and operate according to the local and the requirements of this installation instruction, otherwise Clenergy will void the warranty.
- Most of PVezRack® SolarTerrace Ikon components are metal products, please pay attention to the length, port metal burrs, weight, etc., to avoid bumping into personnel, if there is any injury causing, please seek medical attention immediately.

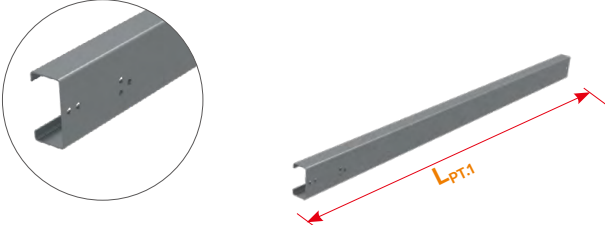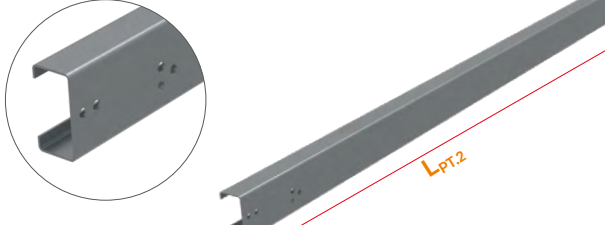List

SolarTerrace Ikon

<p>A Front Post C140x70x20x3.0xL_{PT,1}</p>  <p>Detailed dimensions L_{PT,1} refer to "General Assembly Drawing".</p>	<p>B Rear Post C140x70x20x3.0xL_{PT,2}</p>  <p>Detailed dimensions L_{PT,2} refer to "General Assembly Drawing".</p>
<p>C Post Connector</p> 	<p>D Crossbeam Clamp L50</p> 
<p>E Hex Bolt M12x45</p> 	<p>F Plain Washer 12x24</p> 
<p>G Spring Washer 12</p> 	<p>H Hexagon Nut M 12</p> 


I Hex Flange Bolt M12x30



J Crossbeam Splice C170-L300




K Crossbeam C170x70x25x2.0-L_{CB}

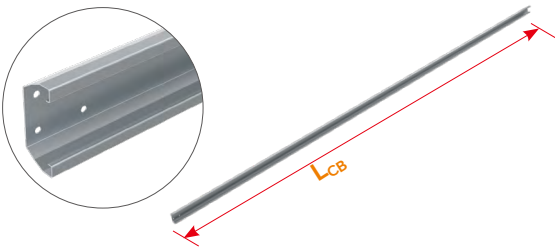

Detailed dimensions L_{CB} refer to "General Assembly Drawing".

L Purlin

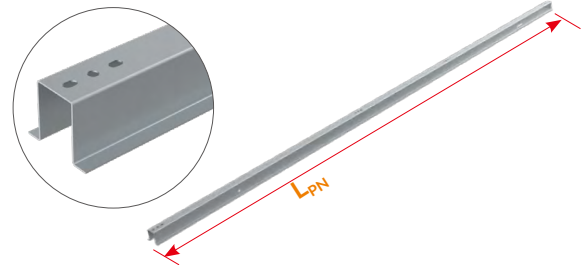

Detailed dimensions L_{PN} refer to "General Assembly Drawing".

M End Clamp MAC



N Inter Clamp MAC



O Panel Positioning Clip 3 pcs



P Mushroom Hex Square Neck Bolt M8x60




Q Large Plain WasHex 8x24



R Spring Washer 8



S Hexagon Nut M8



T Purlin Anchor



U Side Purlin Anchor



V Hex Flange Bolt M12x65



Jig


① Toroda Rail



② Purlin Positioning Clip



③ Diamond module




④ Hex Bolt M8x20





Step 1: Ramming Post

A Front Post C140x70x20x3.0xL_{PT,1}

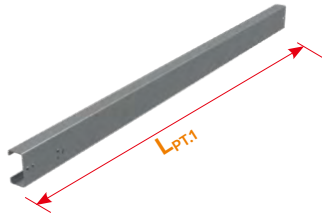

Quantity and Detailed dimensions L_{PT,1} refer to "General Assembly Drawing".


B Rear Post C140x70x20x3.0xL_{PT,2}

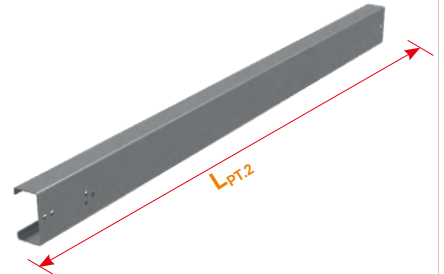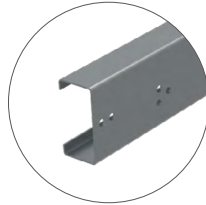

Quantity and Detailed dimensions L_{PT,2} refer to "General Assembly Drawing".

Table Spacing Tolerance



➔ E (Northern Hemisphere)
W (Southern Hemisphere)
Top View

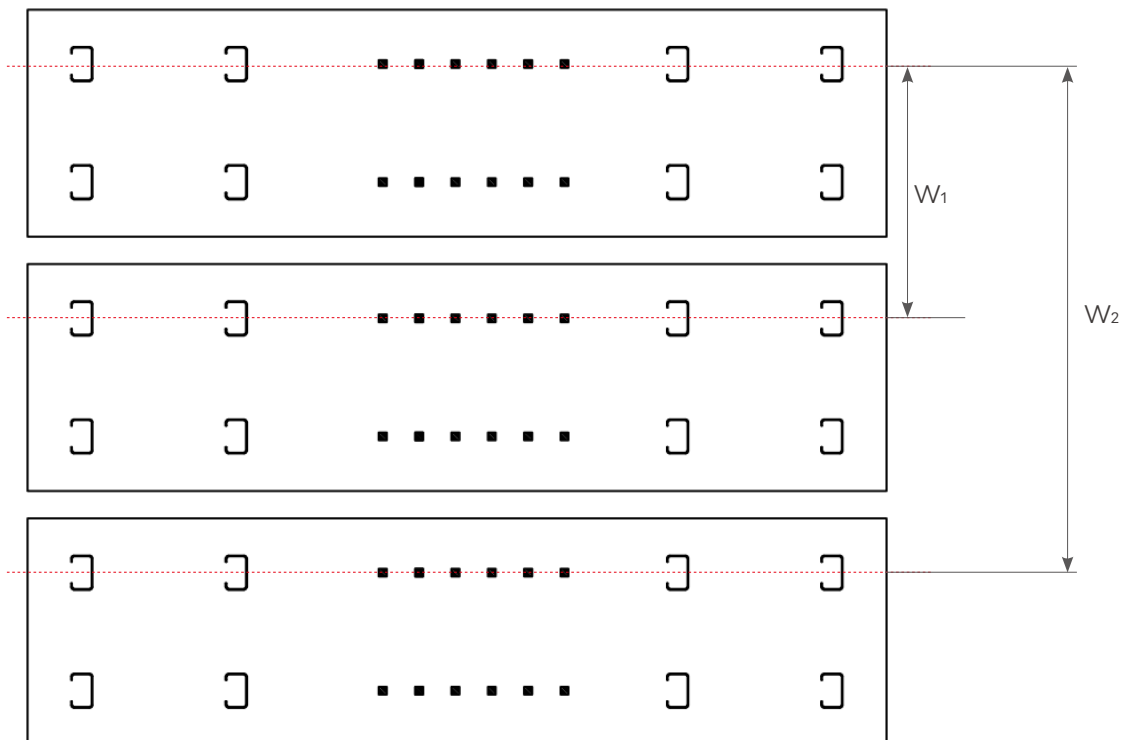

Notice:

1. The distance W₁/W₂ between front and back table refer to the "Layout" (not in the scope of supply).
2. Pay attention to the post orientation when installing the post.
3. If structure cannot be installed due to the spacing error of the posts, the posts need to be re-installed.
4. All installation errors must meet requirements, otherwise, the normal operation will be affected.


Post Spacing in a Flat

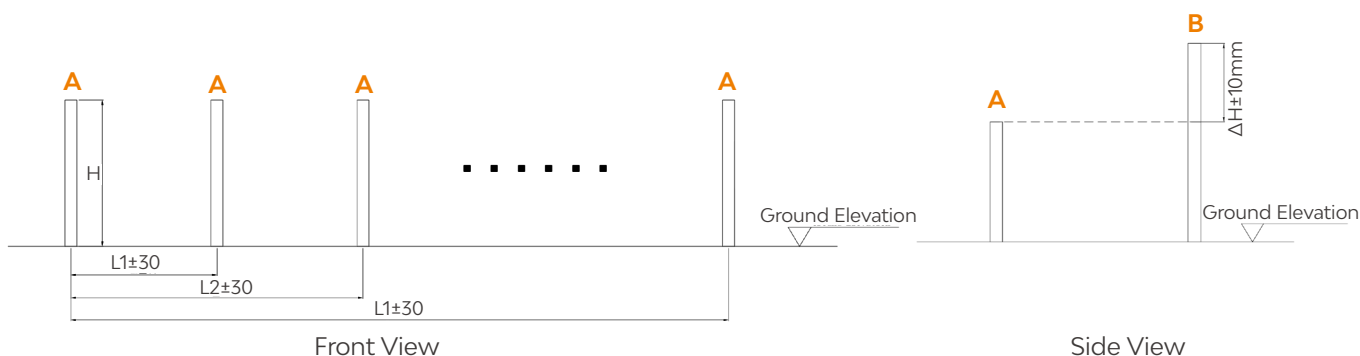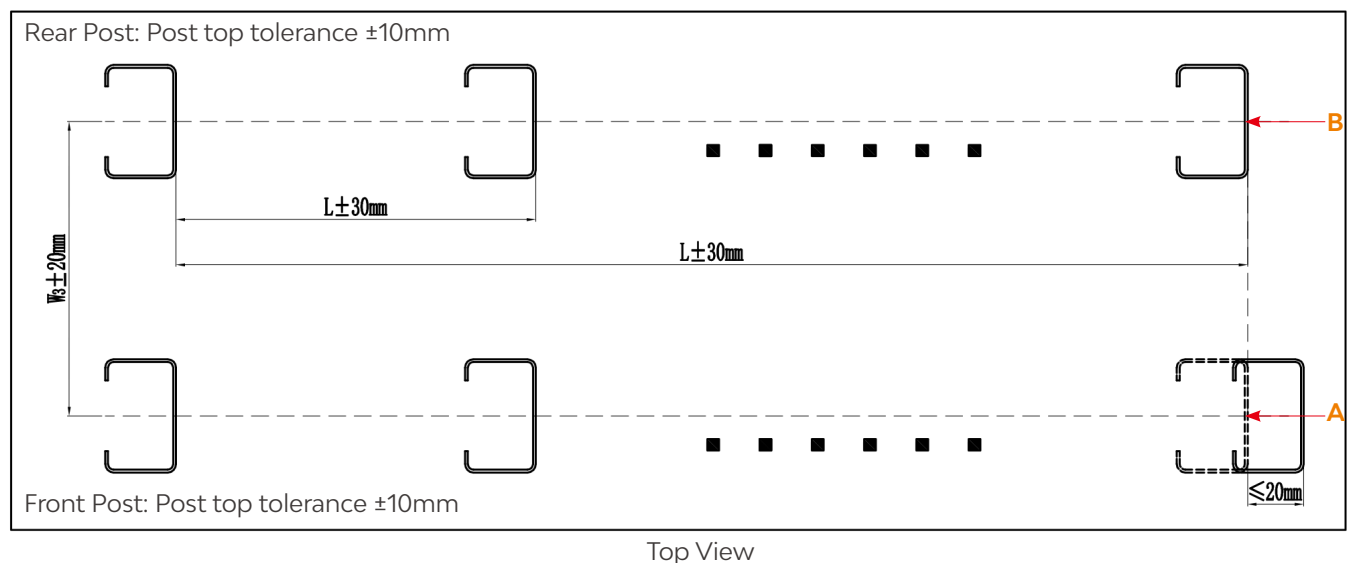

Notice:

1. The distance W_1 between front and back post can be adjusted to $\pm 20\text{mm}$, this adjustment cannot be added or reduced, refer to the "General Assembly Drawing".
2. Pay attention to the post orientation when installing the post.
3. Install the most side post first, and then install other posts in a east-west direction. In the absence of a slope, the post spacing detailed dimensions L refer to the "General Assembly Drawing". When there is a θ° or β° slope, the post spacing refer to the manual "3.1.2 Post Spacing in Slope".
4. The allowable value of the adjustable position of the post top is: south-north $\pm 10\text{mm}$. Base on the side post, the east-west adjustment of other post is $\pm 30\text{mm}$, this adjustment cannot be added or reduced.


Post Spacing in Slope

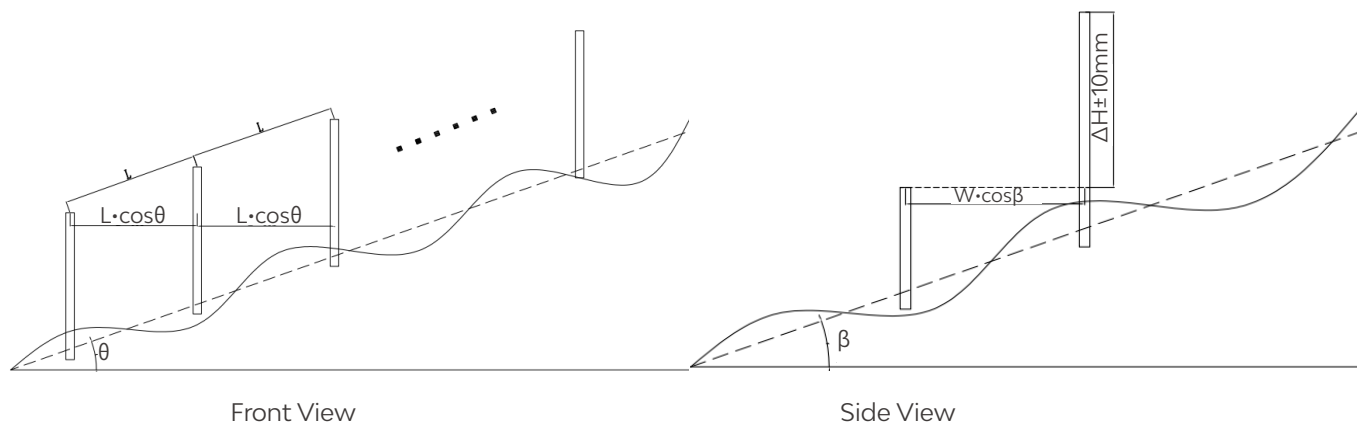

Notice:

1. The height of post from the ground after ramming is $H \pm 5$, detailed dimensions H refer to the "General Assembly Drawing".
2. The height difference ΔH between front and back post can be adjusted to $\pm 10\text{mm}$, Detailed dimensions ΔH refer to the drawing.
3. In the absence of a slope, the post spacing detailed dimensions L and H refer to the drawing. When there is a θ° W-E slope, the post spacing should be $L \cdot \cos\theta$. When there is a β° S-N slope, the height difference ΔH stays the same.
4. All installation errors must meet requirements, otherwise, the normal operation will be affected.

Post – Ramming Allowed Tolerances

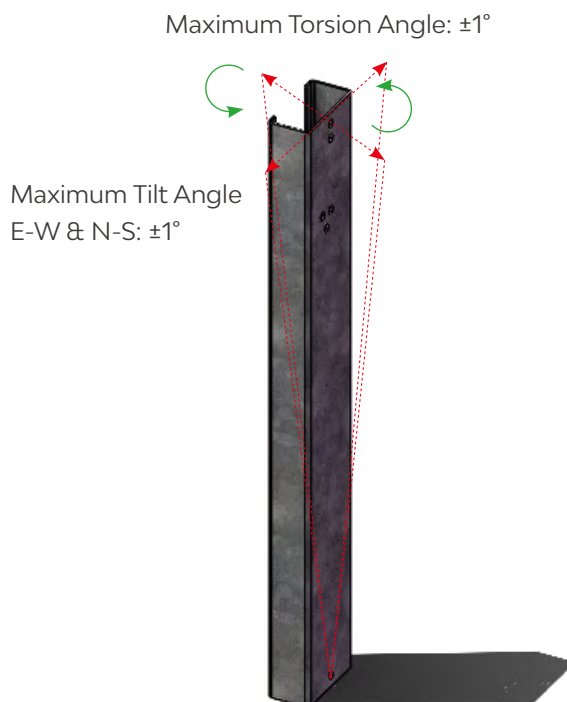

Notice:

1. When installing the Posts, it is necessary to adjust the other posts based on the most side post.
2. The above data is the adjustment amount of a single post and all adjustment amounts are not allowed to add up.

Step 2: Post Connector Assy.

C Post Connector 1 pcs



D Crossbeam Clamp L50 2 pcs



Hex Bolt Assy. M12x45

E Hex Bolt M12x45 2 pcs





F Plain Washer 12x24 2 pcs



G Spring Washer 12 2 pcs



H Hexagon Nut M 12 2 pcs

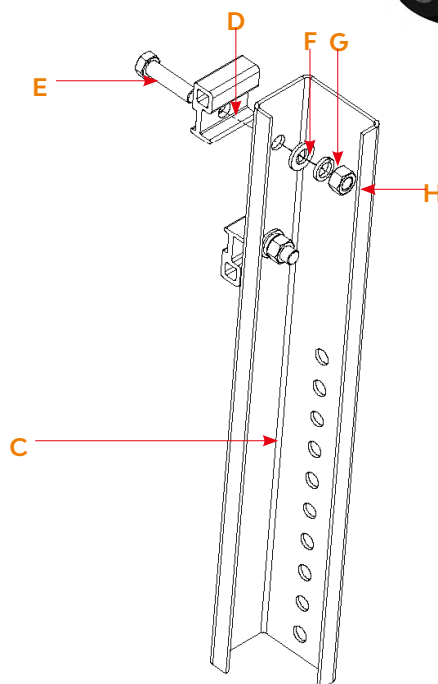

Attention

- Don't Tighten

Notice:

1. The angle between Post and Post Connector is adjustable, which is infinite angle adjustment by Crossbeam Clamp.
2. Ensure that all bolt heads face the same direction. Don't tighten the Hex Bolt Assy. M12x45.

Step 3: Post & Post Connector

Hex Bolt Assy. M12x30

I Hex Flange Bolt M12x30 2 pcs




F Plain Washer 12x24 2 pcs



G Spring Washer 12 2 pcs



H Hexagon Nut M 12 2 pcs




Install Angel
Of "General Assemble Drawing"

15°


20°/30°

25°/35°

Position of Post & Post Connector

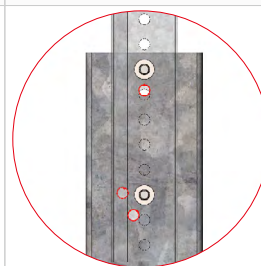

Specification	Torque
Hex Bolt Assy. M12x30	50-55N·m

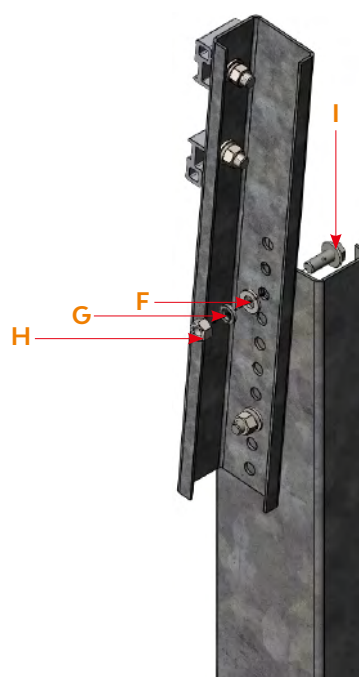



Notice:

1. Ensure that all bolt heads face the same direction.
2. Pre-tightening torque of Hex Bolt Assy. M12x30: 50-55N·m.

Step 4: Crossbeam & Crossbeam Splice

K Crossbeam C170x70x25x2.0-L_{CB} 2 pcs

J Crossbeam Splice C170-L300 1 pcs

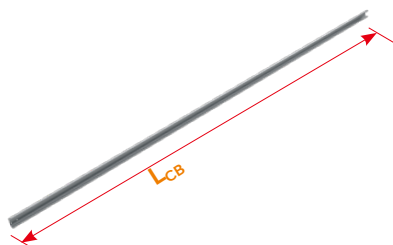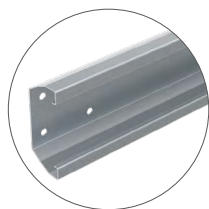

Quantity and Detailed dimensions L_{CB} refer to "General Assembly Drawing".

Hex Bolt Assy. M12x30


I Hex Flange Bolt M12x30 8 pcs

F Plain Washer 12x24 8 pcs



G Spring Washer 12 8 pcs

H Hexagon Nut M 12 8 pcs



Crossbeam Connector



Crossbeam





Attention

- Don't Tighten

Notice:

1. Crossbeam Clamp L50 limit the Crossbeams fall, but don't tighten.

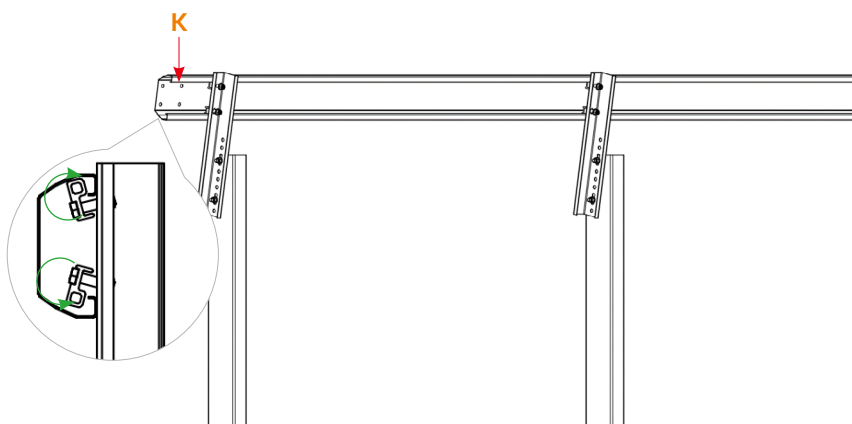


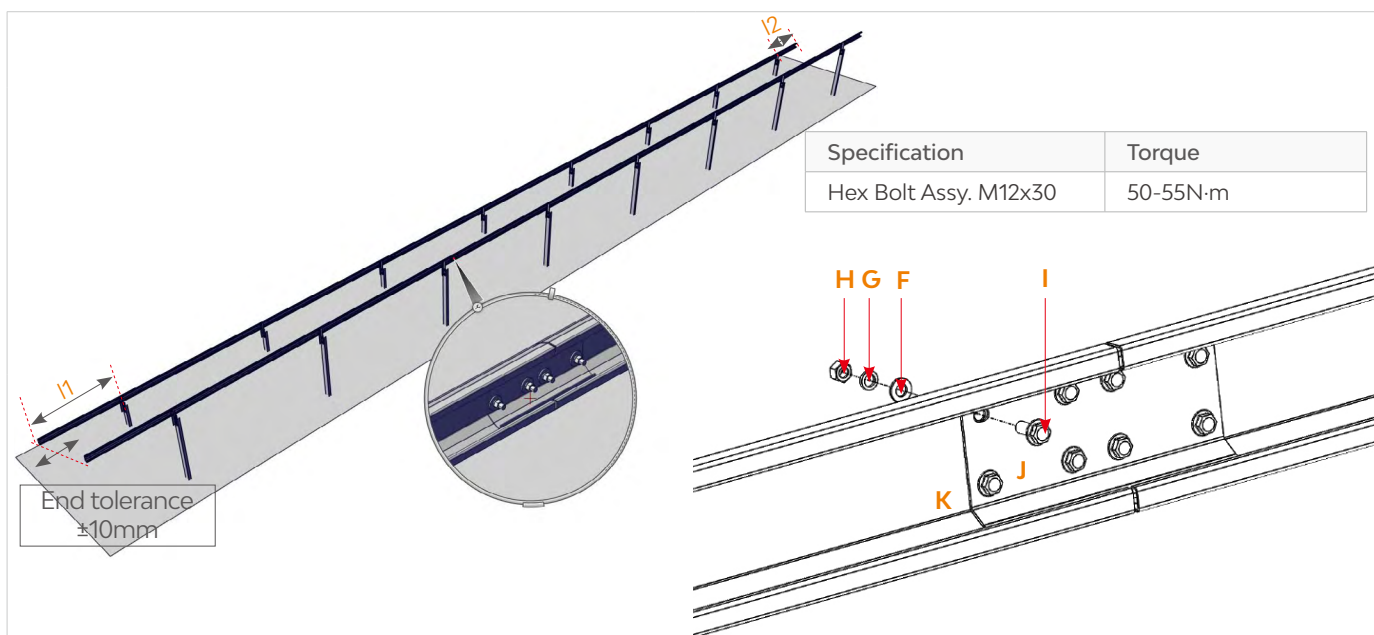







Notice:

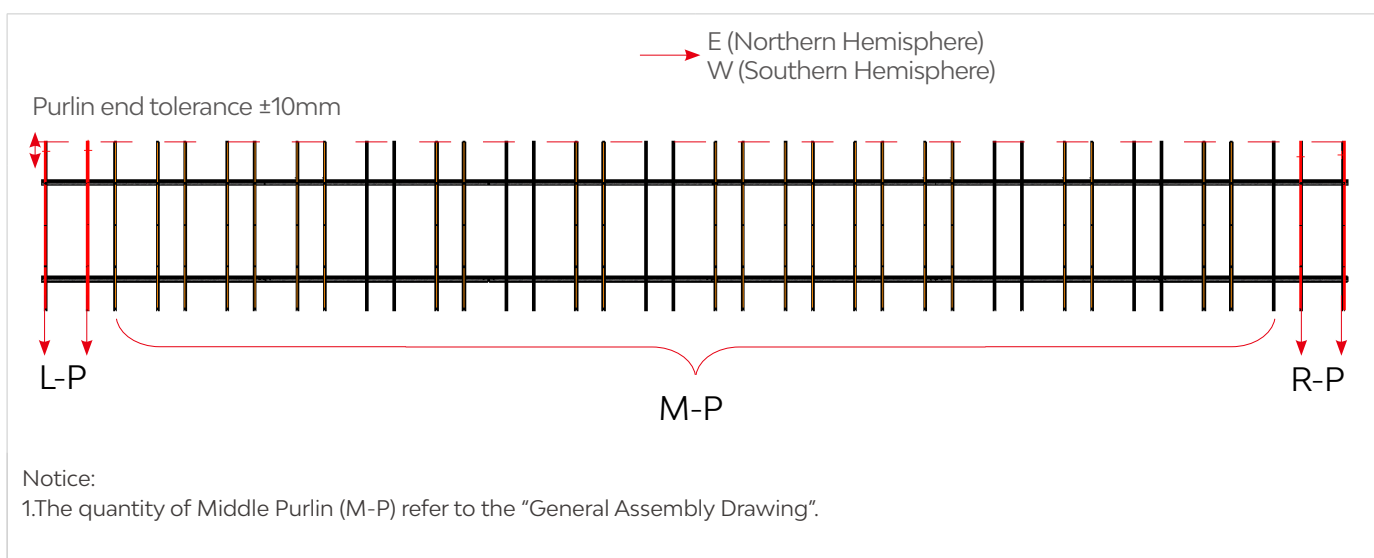1. The overhang **I1** and **I2** of Crossbeam can be adjusted to $\pm 10\text{mm}$, this adjustment cannot be added or reduced, refer to the "General Assembly Drawing".
2. Ensure that each row of Crossbeam is on the same horizontal line, and the alignment of the end is $\pm 10\text{mm}$.
3. Tighten all M12x30 bolt assemblies after adjusting the Crossbeam.
4. Pre-tightening torque of the M12x30 bolt assembly: 50-55N·m, Ensure that all bolt heads face the same direction.

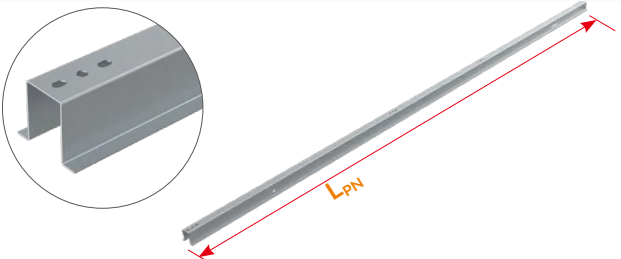



STEP 5: Purlin Layout



Step 6: Purlin Assy.

<p>L Purlin <u>3 pcs</u></p> 	<p>M End Clamp MAC <u>4 pcs</u></p> 
<p>N Inter Clamp MAC <u>6 pcs</u></p> 	<p>T Purlin Anchor <u>2 pcs</u></p> 
<p>U Side Purlin Anchor <u>2 pcs</u></p> 	<p>O Panel Positioning Clip <u>3 pcs</u></p> 

Bolt Assy. M8x60

<p>P Mushroom Hex Square Neck Bolt M8x60 <u>10 pcs</u></p> 	<p>Q Large Plain WasHex 8x24 <u>10 pcs</u></p> 
<p>R Spring Washer 8 <u>10 pcs</u></p> 	<p>S Hexagon Nut M8 <u>10 pcs</u></p> 

Hex Bolt Assy. M12x65



V Hex Flange Bolt M12x65 4 pcs

F Plain Washer 12x24 4 pcs



G Spring Washer 12 4 pcs

H Hexagon Nut M 12 4 pcs

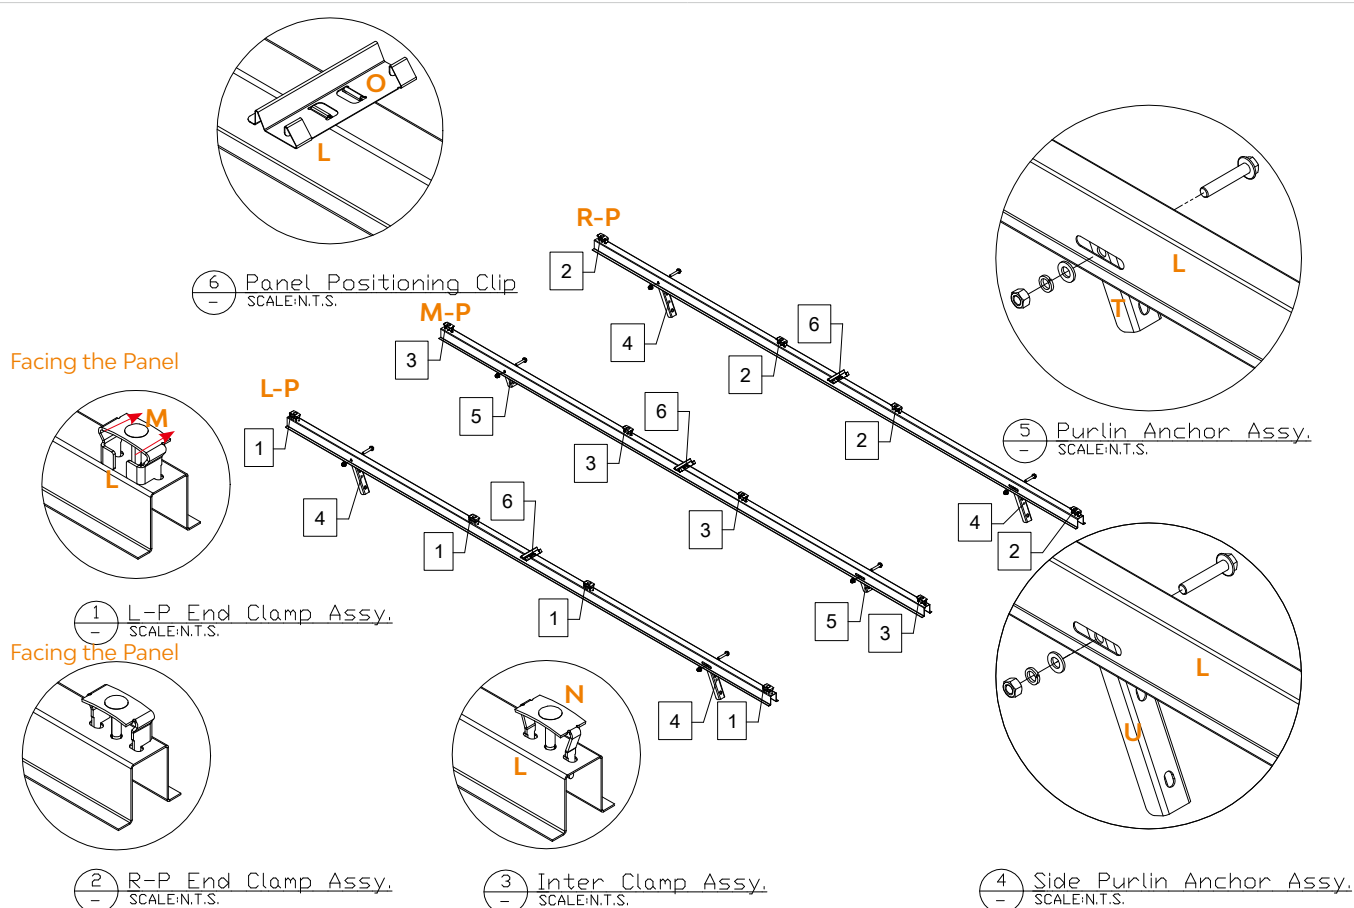

Bolt Assy. M8x60

Hex Bolt Assy. M12x65

Notice:

1. Ensure the End Clamp facing the Panel.
2. Bolt Assy. M8x60 for End Clamp Assy. & Inter Clamp Assy. Hex Bolt Assy. M12x65 for Purlin Anchor Assy. & Side Purlin Anchor Assy.
3. Ensure that all bolt heads face the same direction. All Bolt don't need to tighten.



Attention


- Don't Tighten

Step 7: Purlin & Crossbeam

D Crossbeam Clamp L50 6 pcs



K Crossbeam C170x70x25x2.0-L_{CB}

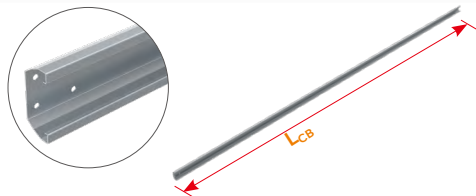

Quantity and Detailed dimensions L_{CB} refer to "General Assembly Drawing".

Hex Bolt Assy. M12x24


F Plain Washer 12x24 6 pcs



G Spring Washer 12 6 pcs



H Hexagon Nut M 12 6 pcs




E Hex Bolt Assy. M12x24 6 pcs



Install Angel Of "General Assemble Drawing"	15°-25°	26°-35°
Position of Crossbeam-Purlin		


Side Purlin-Crossbeam

R-P
L-P

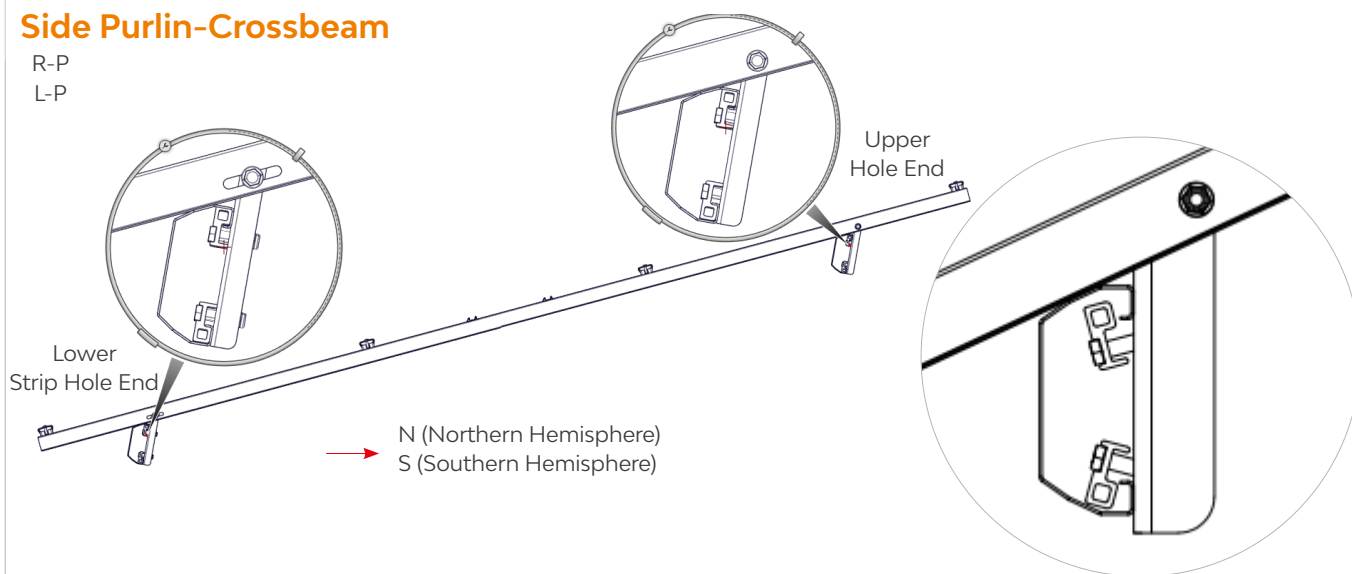

Middle Purlin-Crossbeam

M-P

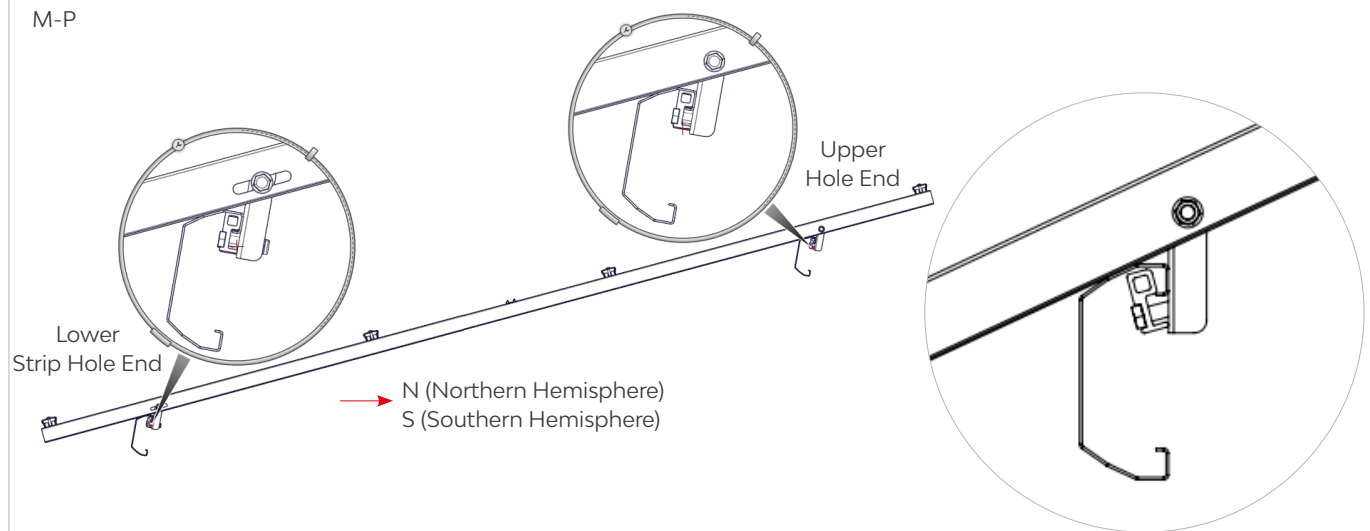

Step 8: Purlin Position

① Toroda Rail 1 pcs



② Purlin Positioning Clip 2 pcs



③ Diamond module 2 pcs






④ Hex Bolt M8x20 2 pcs





R Spring Washer 8 2 pcs



S Hexagon Nut M8 2 pcs

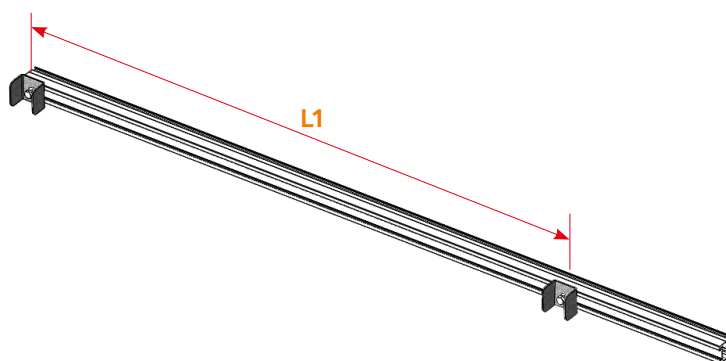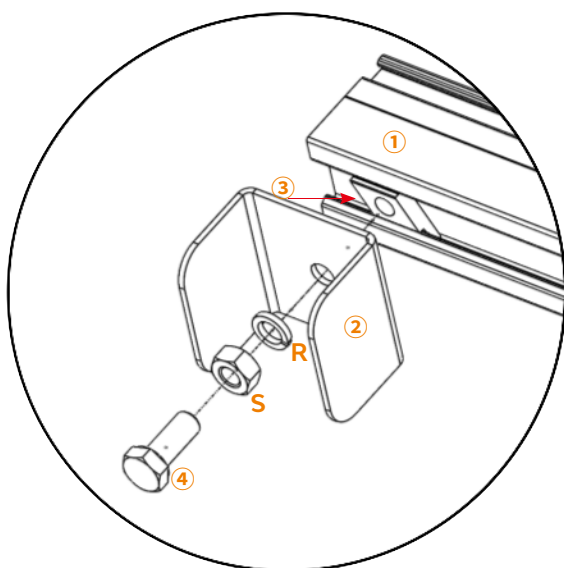

Specification	Torque
Hex Bolt Assy. M8*20	15-18N.mm

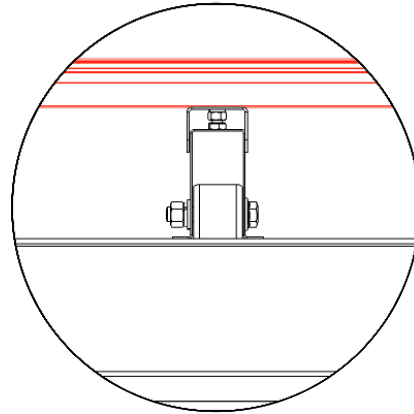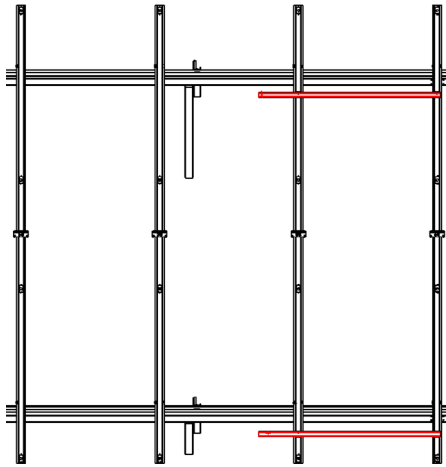


Fastening Position	Specification	Torque
Purlin Anchor & Crossbeam	Hex Bolt Assy. M12x45	40-45N·m
Purlin Anchor & Purlin	Hex Bolt Assy. M12x65	40-45N·m


Notice:

1. Detailed dimensions L1 refer to the "General Assembly Drawing".
2. After purlin adjustment, Pre-tightening torque of the M12x45 bolt assembly: 40-45N·m, to fix the purlin anchor and crossbeam. Pre-tightening torque of the M12x65 bolt assembly: 40-45N·m, to fix the purlin anchor and purlin. Ensure that all bolt heads face the same direction.
3. Ensure that each row of purlin is on the same horizontal line, and the alignment of the end of the purlin is $\pm 10\text{mm}$. The error is absolute error, not relative error, and can not generate cumulative error.

Step 9: Panel

Panel Position

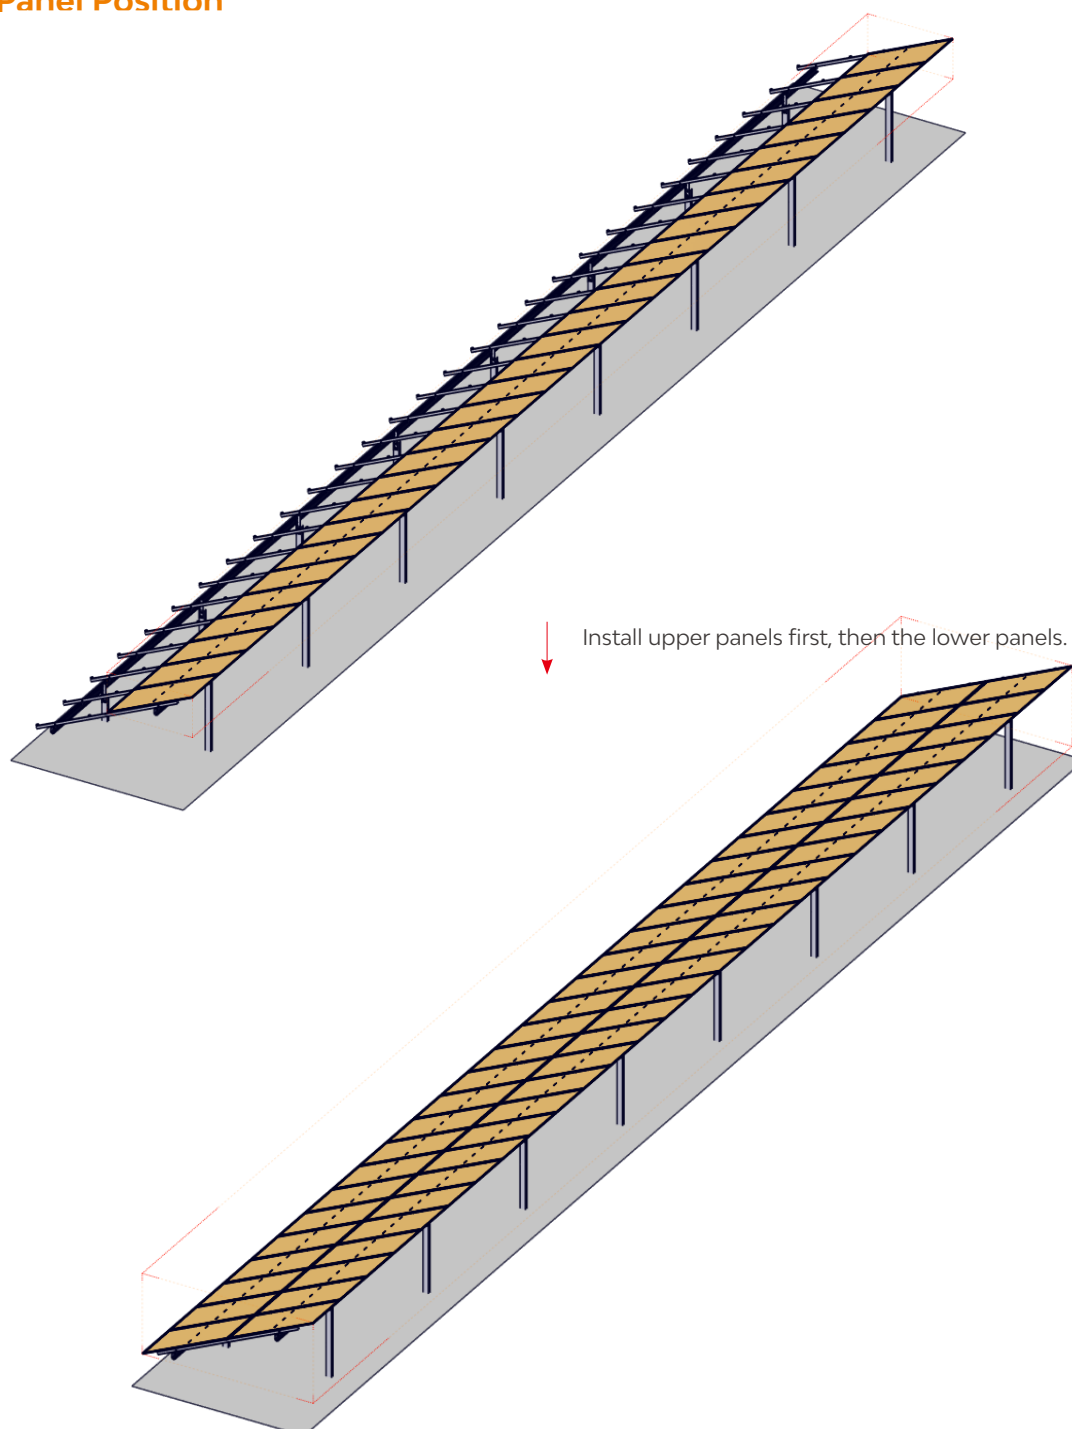


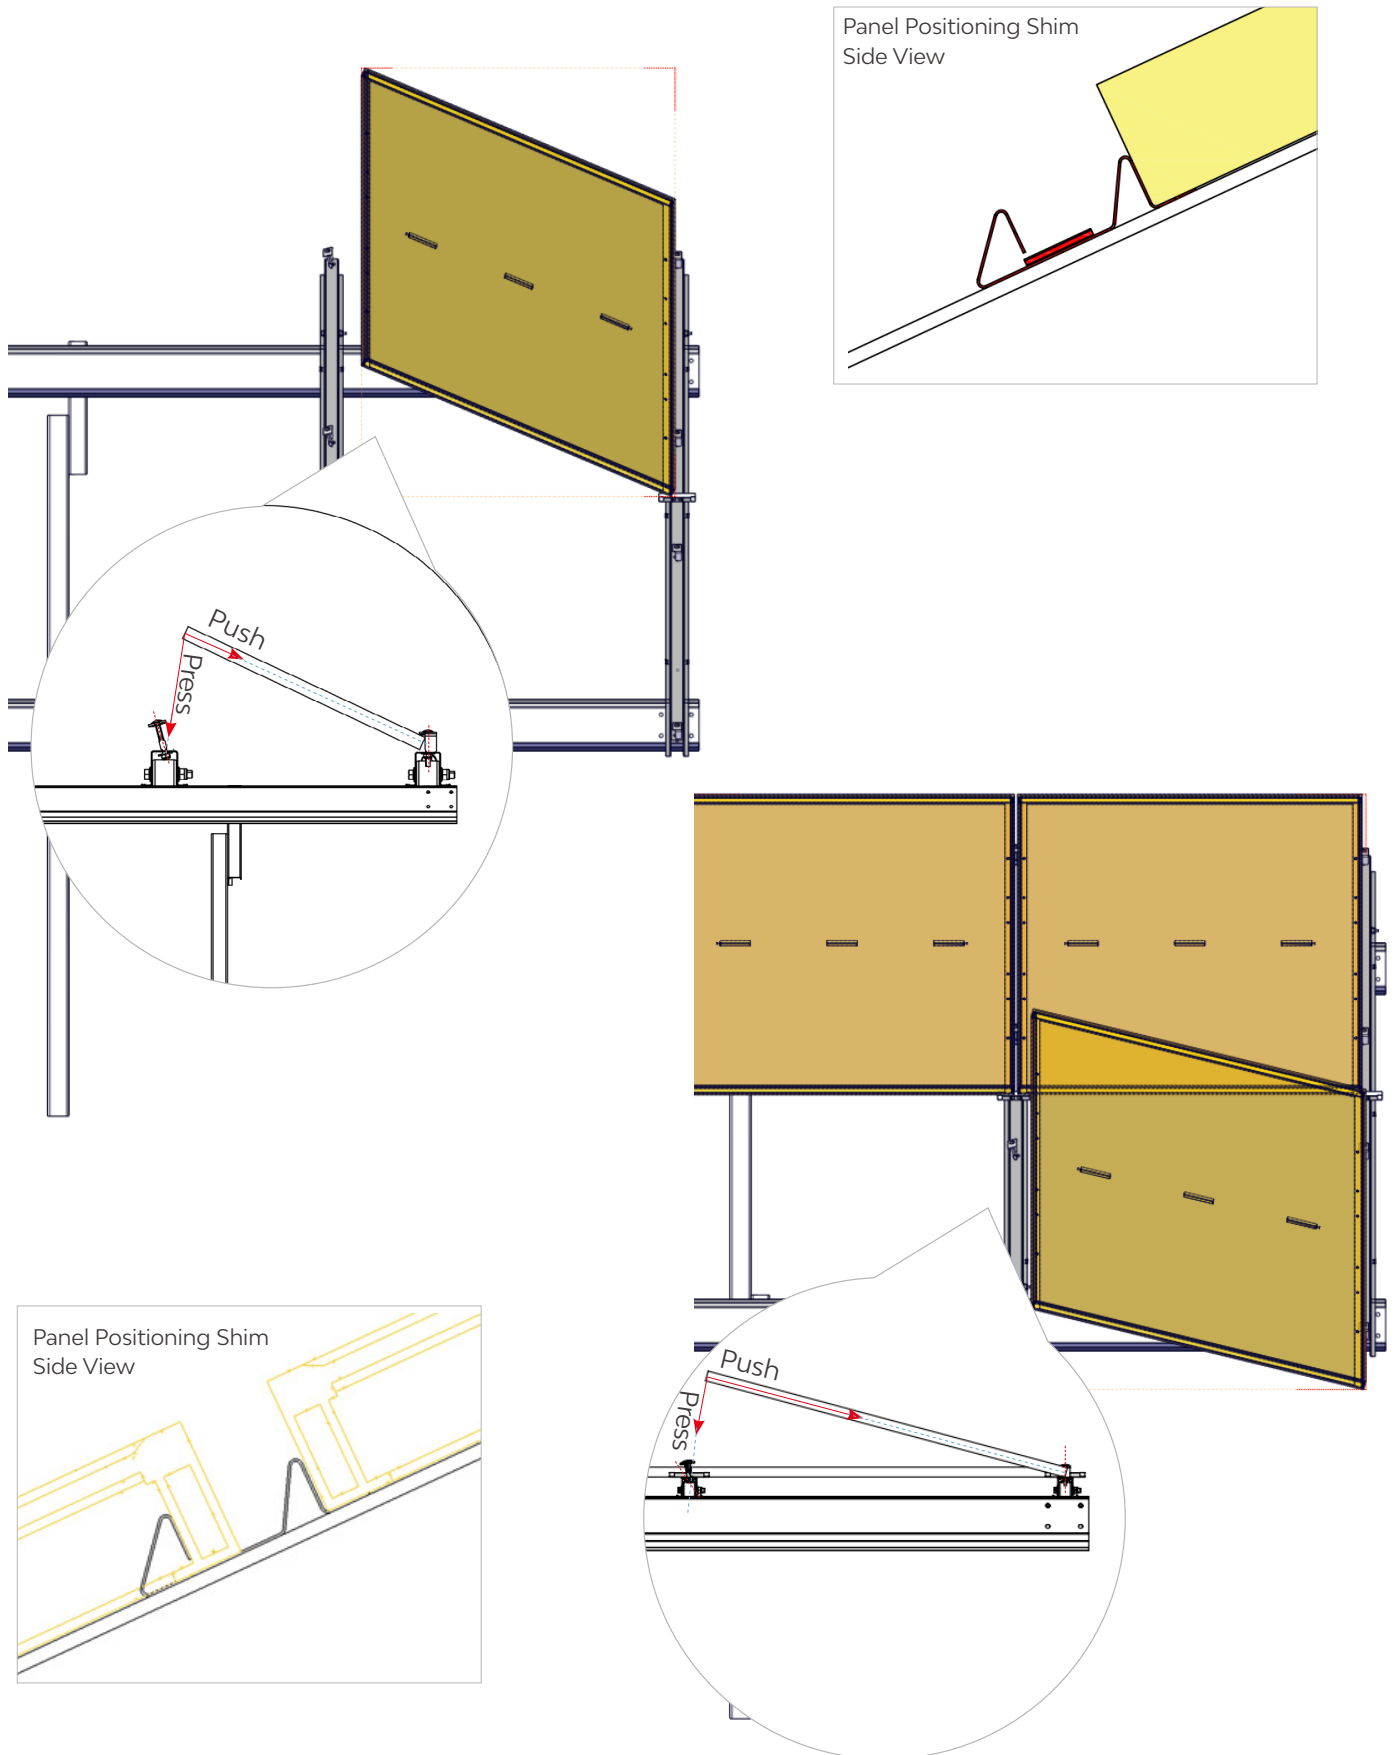

Notice:

1. After panels are installed, pre-tightening torque of Hex Bolt Assy. M8x60: 15-18N·m.
2. Panel Positioning Shim is only an auxiliary installation tool. Do not hang panels for a long time without fixing them.


Pre-tightening of Bolt Assy. M8x60

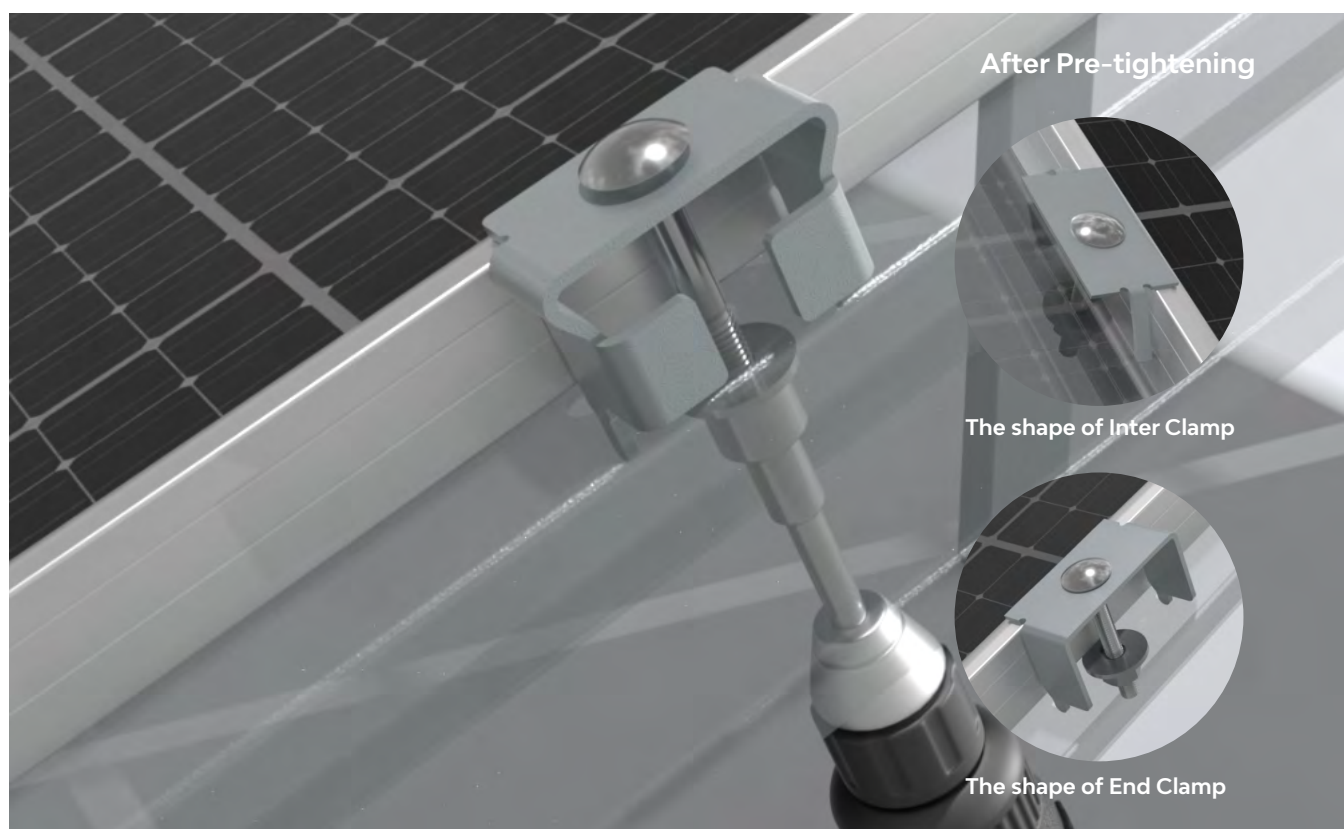


M8 Socket
Min Length: 79mm

Specification	Torque
Hex Bolt Assy. M8x60	15-18N·m

STEP 10: Panel Wiring

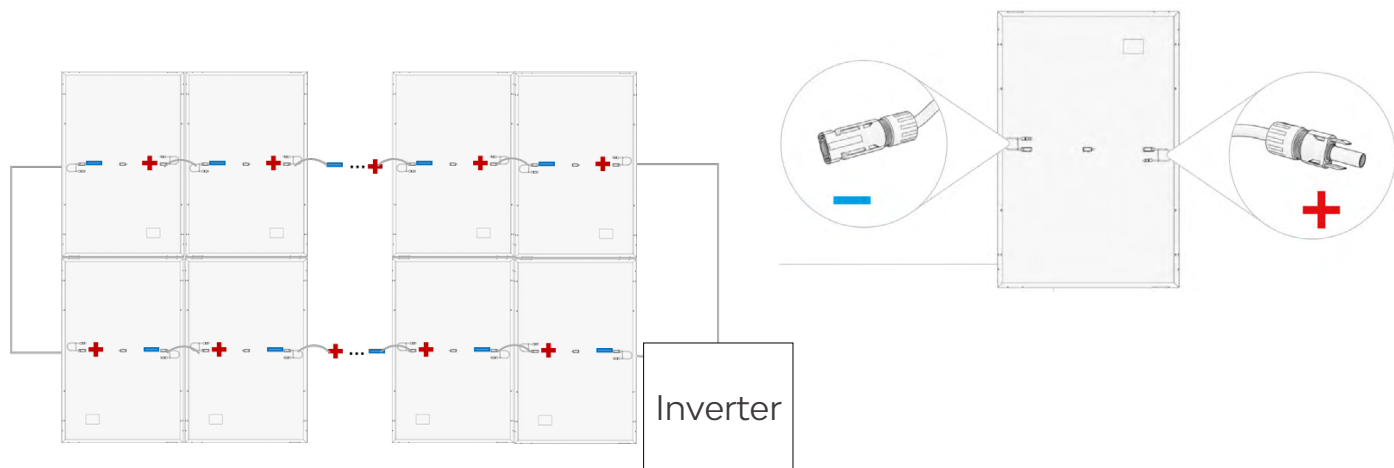

Step 11: Earth Grounding Path

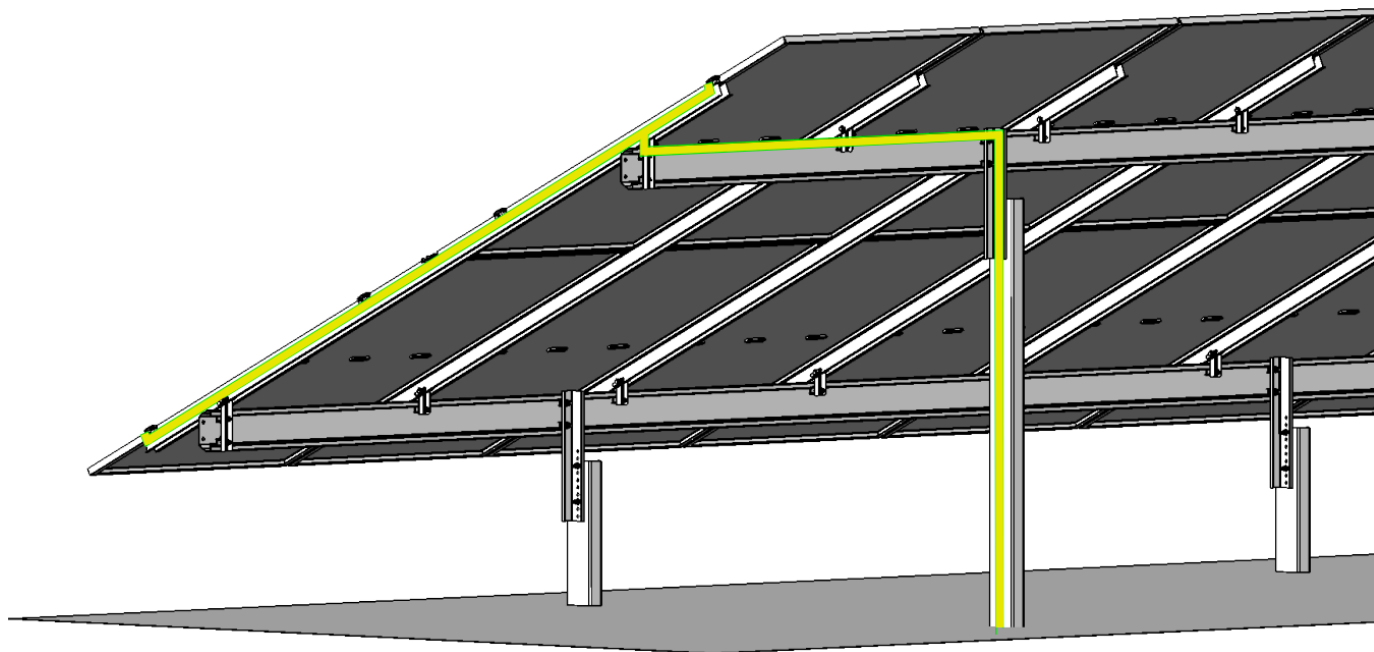







Clenergy

1001-1009 Min'an Rd,
Huoju Hi-tech Ind. Dev. Zone
Xiang'an District 361101, Xiamen,
Fujian, China

Phone: +86 592 311 0088
Email: sales@clenergy.com
Web: www.clenergy.com

 @ClenergyGlobal / @ClenergyClub / @ClenergyAUS / @ClenergyThailand
 @Clenergy_global  @Clenergy  @Clenergy  @ClenergyClub

A Clenergy Technologies Company